
## DATA SHEET



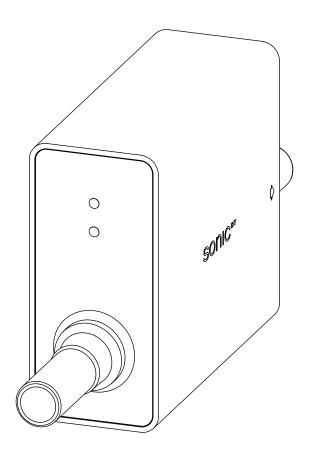

# sonic<sup>DT2020</sup>

Part number: 990-1002/01

## General Description

The sonicDT2020 flow sensor features a huge dynamic range as well as excellent accuracy for the measurement of water-based liquids. Beer but also soft drinks or other liquids can easily be measured by this innovative Ultrasonic Time of Flight technology sensor. The almost straight tube is suitable for mechanical cleaning with sponge balls without restrictions in the flow path. It offers easy integration in the liquid flowline thanks to the Ø1/2" (Ø12.70 mm) John Guest $^{\tiny{\circledR}}$ Super Speedfit compatible tube ends. The pulse output signal (open collector) can be used in combination with a totalizer display to control single lines. The sonic<sup>DT2020</sup> also features an empty detection in the way of an open collector alarm given wenn no liquid is present in the measurement tube.

Special features: John Guest® Super Speedfit Ø1/2" (12.70mm) can be directly connected. Empty line detection with alarm output. Suitable for mechanical cleaning with sponge balls.



### **Materials:**

Wetted parts: Grivory HT1V-5 FWA (tube)

400 gram Weight:

(depending on cable length)

PP with FKM seal Housing:

protection class of IPx5

Screw nut: M3 x 6mm deep (aluminium)

### Technical data:

Measuring fluid: water based liquids Calibration fluid: water 25°C Linear range:

0.1 - 12.0 I/min (zero flow cutoff at 100 ml/min)

Response time:  $\sim$ 50ms

Measuring accuracy:  $\pm$  50ml/min or  $\pm$ 2.0%

of reading

 $+0^{\circ}$ C to  $+30^{\circ}$ C Fluid measurement temperature: 32°F to 86°F

10 bar at 20°C Pressure range: 145 psi /68°F

Mounting position: freely selectable Nozzle size: Ø 9.80mm

### **Electrical connection ratings:**

+12VDC to +24 VDC Power supply:

Consumption: max. 100mA

(@12VDC supply)

Open collector NPN, Pulse output: 1000 pulses per litre (max. 30VDC, 30mA)

Alarm output: No fluid alarm,

open collector NPN (max. 30VDC, 30mA)


Status LED: Green = normal operation


Red = sensor disfunction Orange = warning (no fluid, bubbles, partides, etc.)


Connections: Cable 7 x 0.25mm<sup>2</sup> wire

AWG 24 (open wire) cable lenght on request, max. 5.0 meter (standard 1.5 meter)

## **Dimensions in mm:**

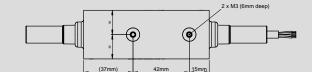

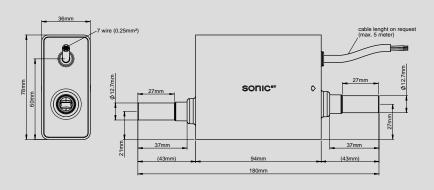

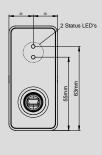

Cable color	Description		
white	GND		
brown	+12VDC to +24VDC		
green	Pulse output		
yellow	No fluid alarm output		
blue	GND		
pink	No Conection (service port only)		
grey	No Conection (service port only)		

We reserve the right to make modifications in the interests of technical progress

## RESISTANCE

Special regulations which must be complied with by the flow sensor manufacturer apply to each country, e.g. CE, NSF, FDA and SK. The various media flowing through the flow sensor differ from application to application. You are advised to enquire with the medium manufacturer as to whether the entire installation and the flow sensor are resistant to the medium itself (see Material)!


## ELECTRONIC

DIGMESA electronic circuitry is always designed for operation with DIGMESA flow sensors. Please note the following if connecting to other electronic circuitry:

- The flow sensor does not supply an output voltage but switches the signal terminal to 0 V ground (actuated) or leaves it open (nonactuated)
- •There must be a pull-up resistor between power supply + and signal depending on electronic circuitry!


Version 02 SONIC DT2020 #990-1002/01 GB Seite 2-4


# Interface Connection: Examples Open collector

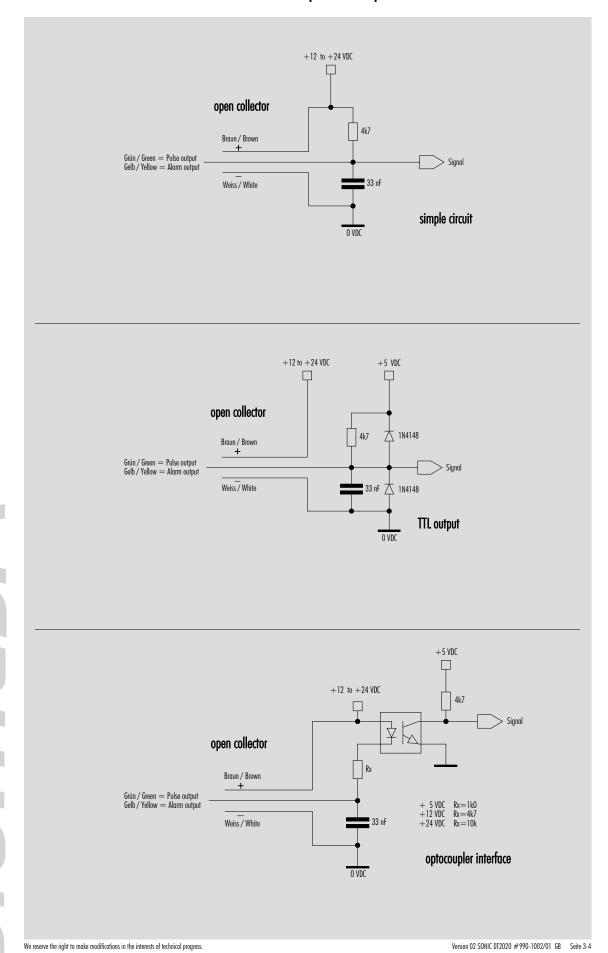

Digmesa AG, Keltenstrasse 31, CH—2563 Ipsach / Switzerland, Phone +41 (32) 332 77 77, Fax +41 (32) 332 77 88, www.digmesa.com

# Measurement sonic<sup>DT2020</sup>

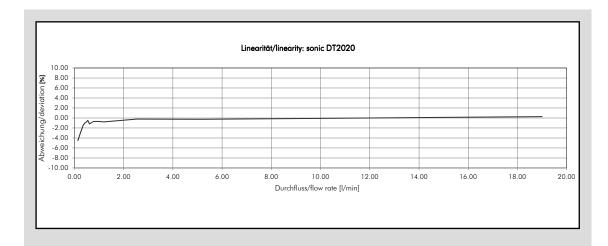

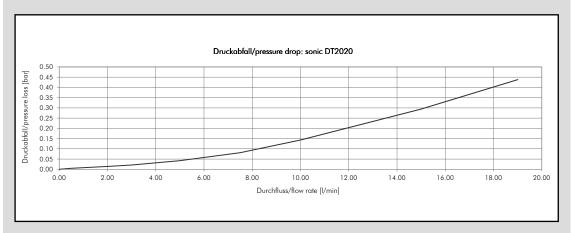

Fluid: Water / 25°C

Nozzle size	Pulses/ Litre	ml/pulse	min. flow rate [l/min]	max. flow rate [l/min]
Ø 9.80 mm	1′000	1.00	0.10	12.00

The values specified must be considered as approximate values.

The number of pulses per litre may differ depending on medium and installation.

We recommend to calibrate the number of pulses per litre in line with the complete installation.

## MEASUREMENT TIPS

- Ensure that there is no fast-pulsatory movement of the fluid
- Ensure that there are no reverse pressure surges
- Ensure that there is no air in the system
- Keep the pressure loss as small as possible
- Pay attention to the mounting position of the flow sensor
- Min/max flow should be in the linear range of the selected flow sensor
- Clean the system at appropriate intervals
- Avoid electrical voltage spikes
- Incorrect wiring of power supply +, signal and ground will destroy the flow sensor
- Do not load electrical contacts mechanically
- Avoid moisture on the electrical contacts
- Avoid stray pick-up via the cable (Do not lay cables in parallel with high current loads)

We reserve the right to make modifications in the interests of technical progress.

Version 02 SONIC DT2020 #990-1002/01 GB Seite 4-4